

66270 662360

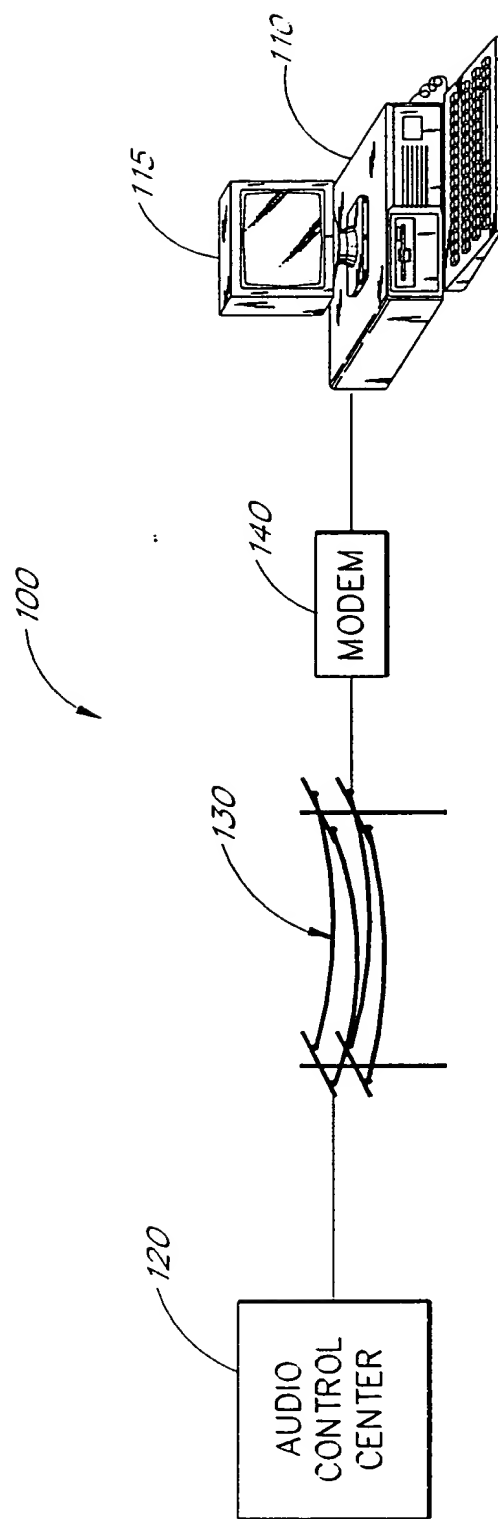


FIG. 1

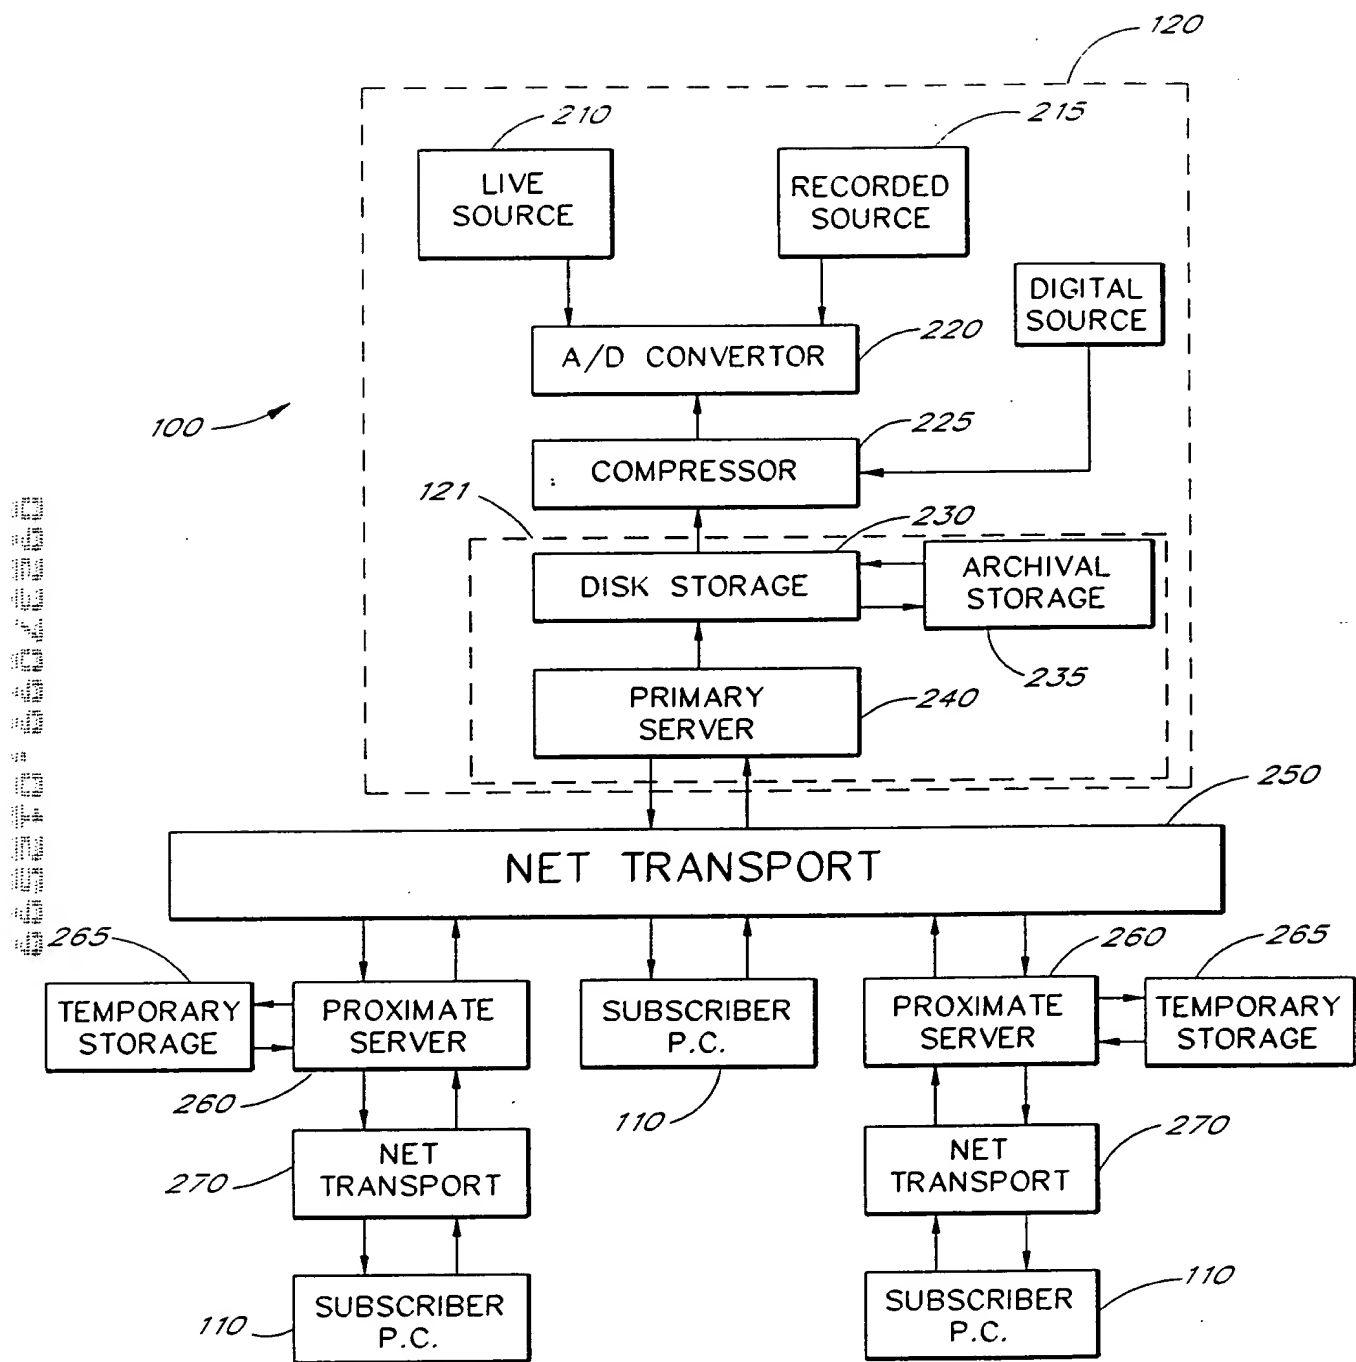


FIG. 2A

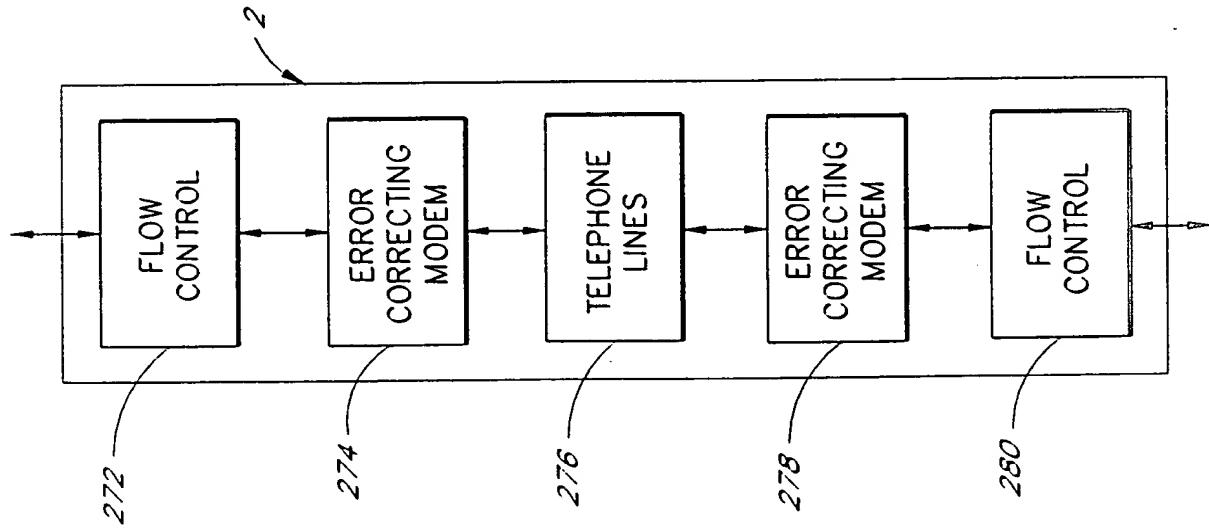


FIG. 2B

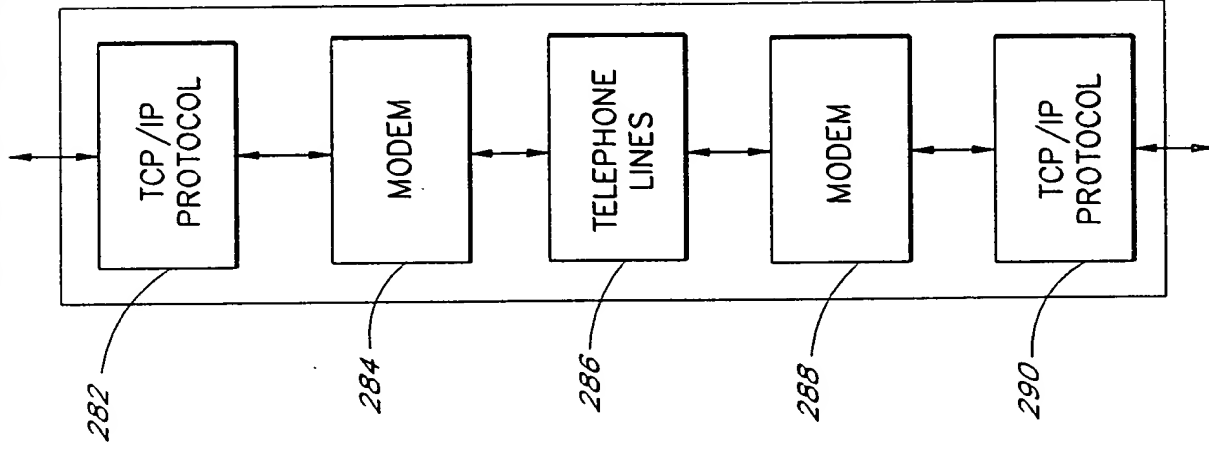


FIG. 2C

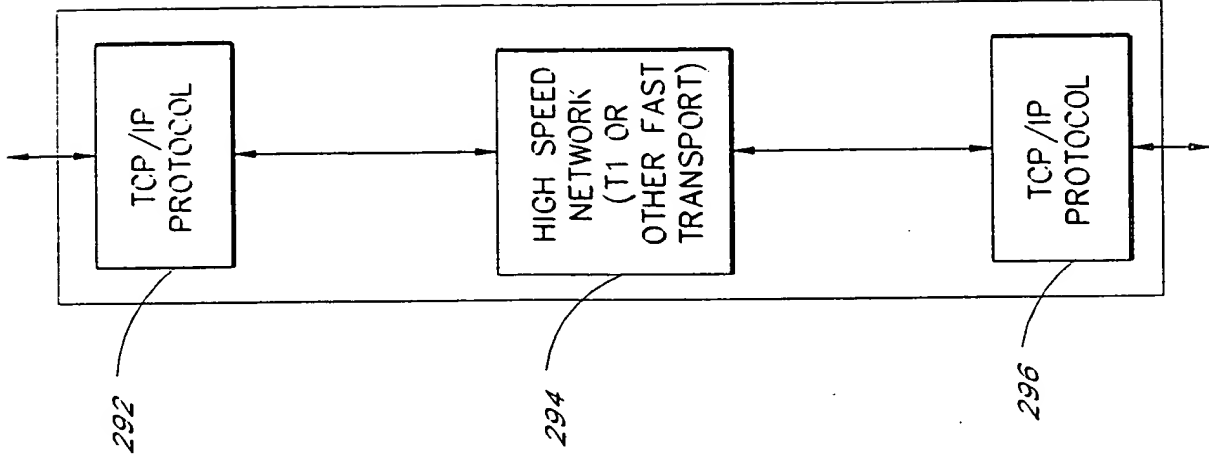


FIG. 2D

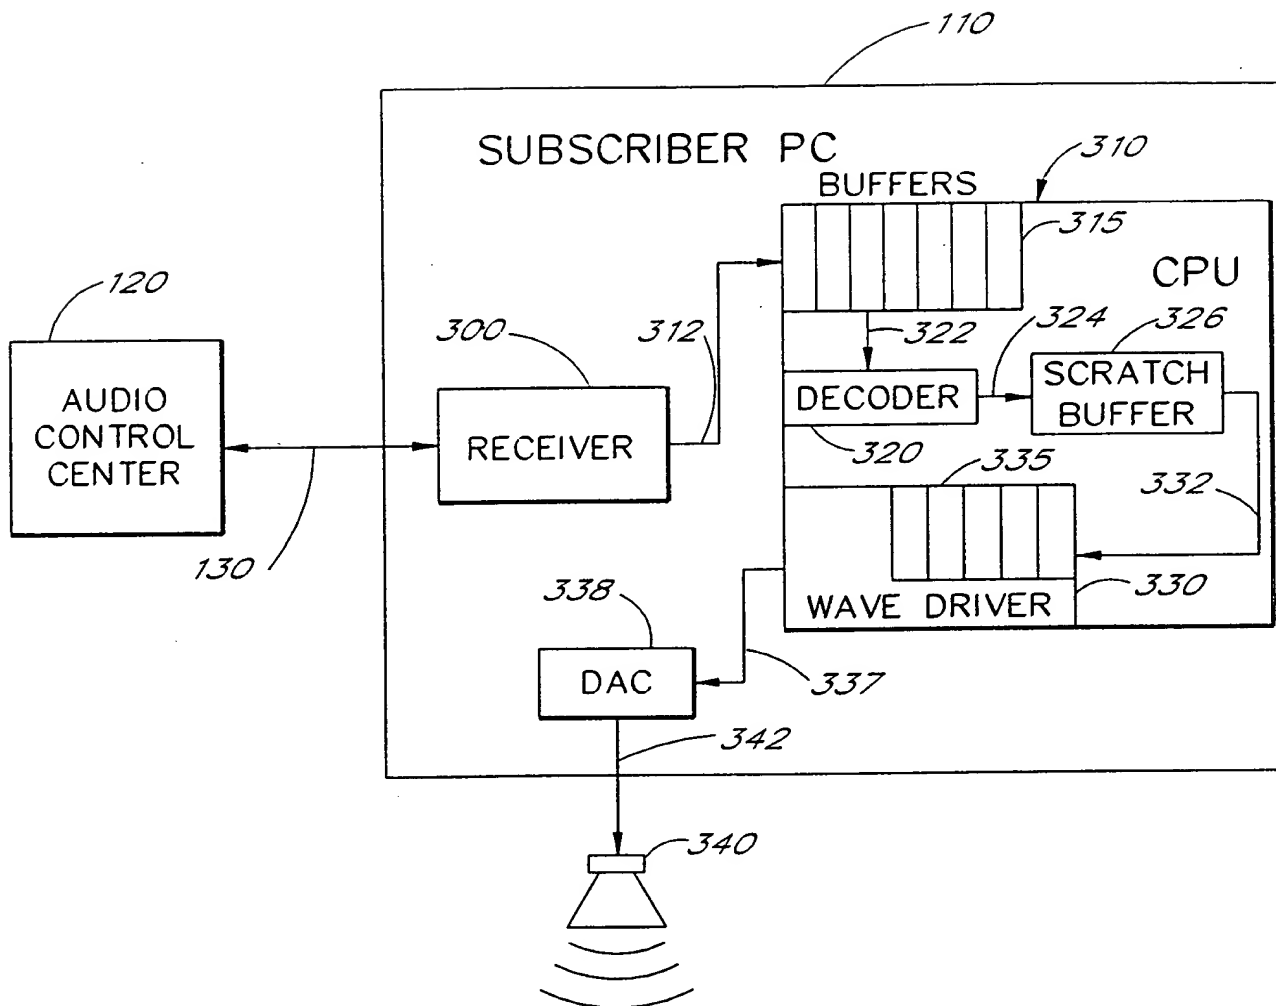
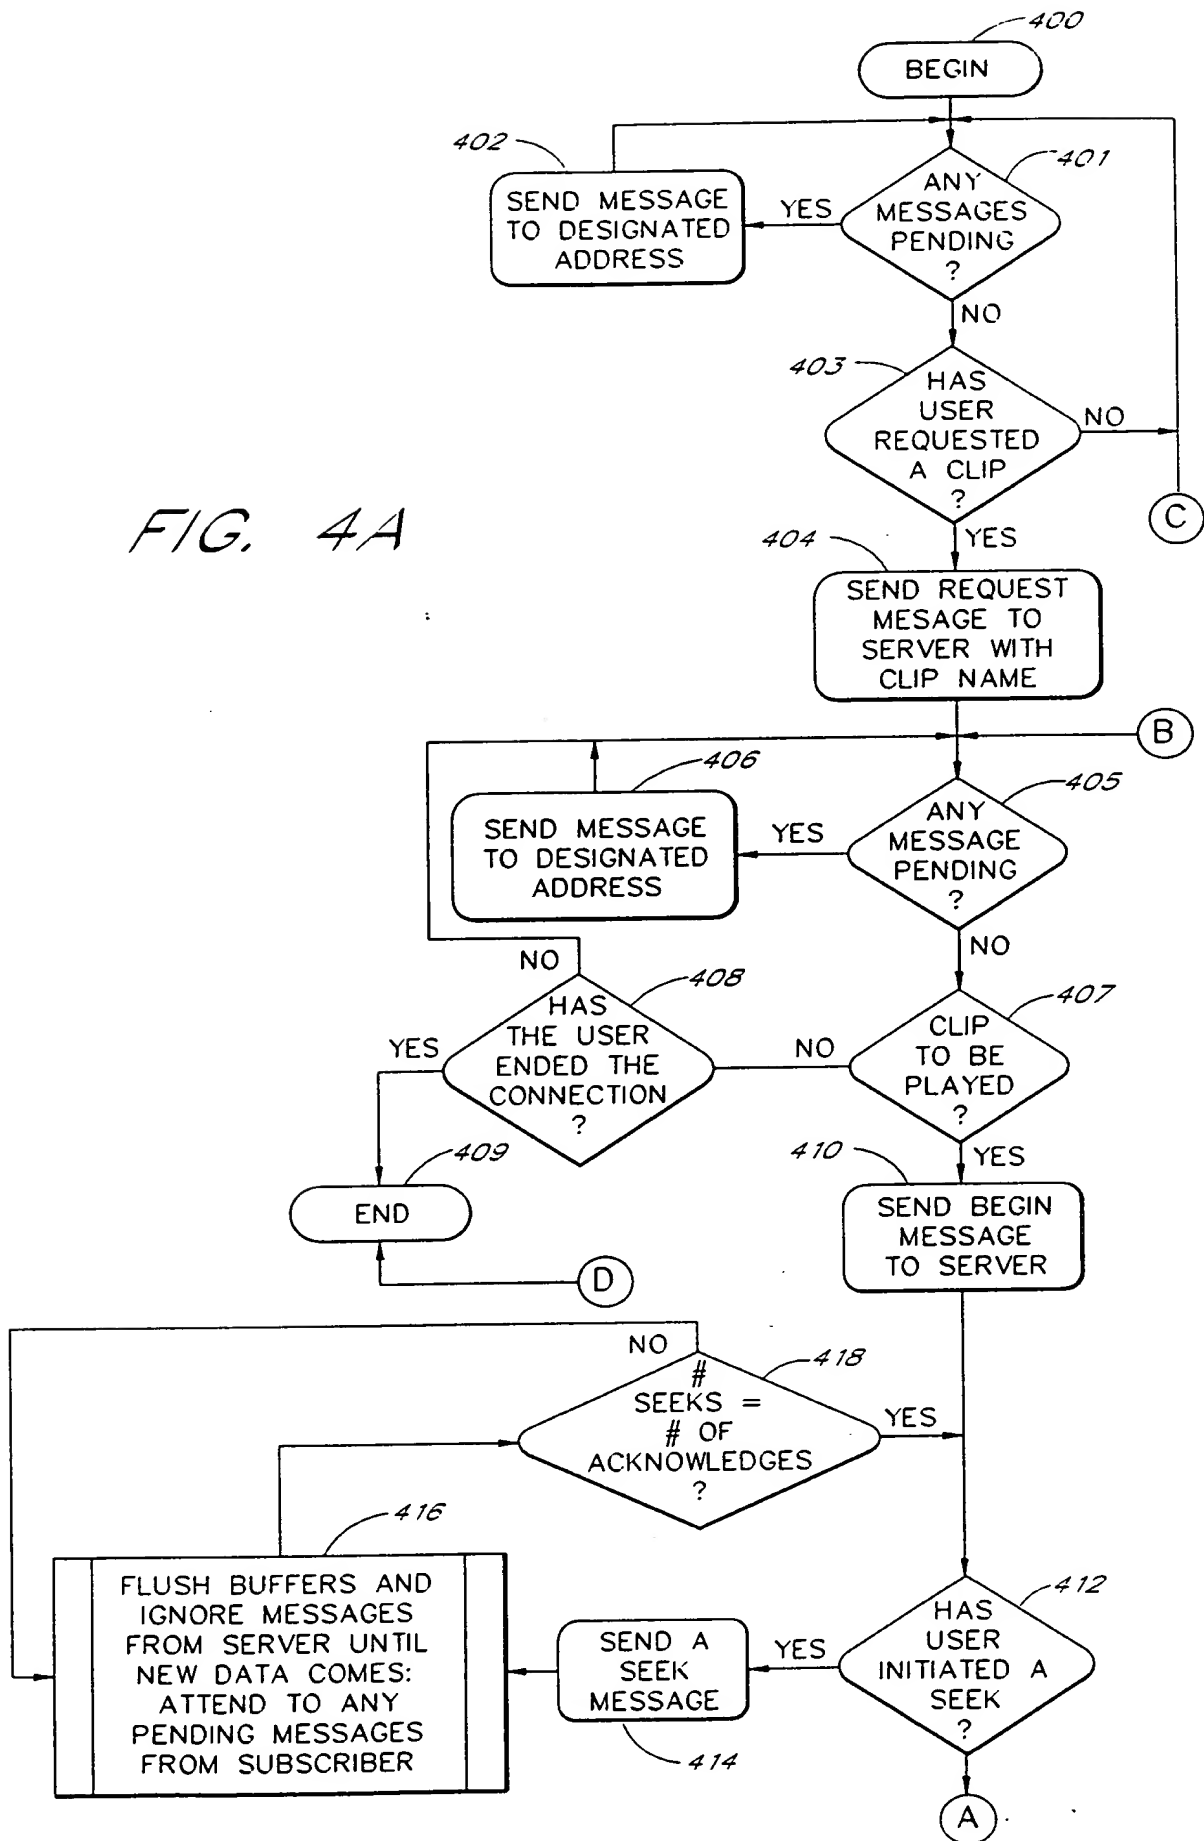


FIG. 3

FIG. 4A



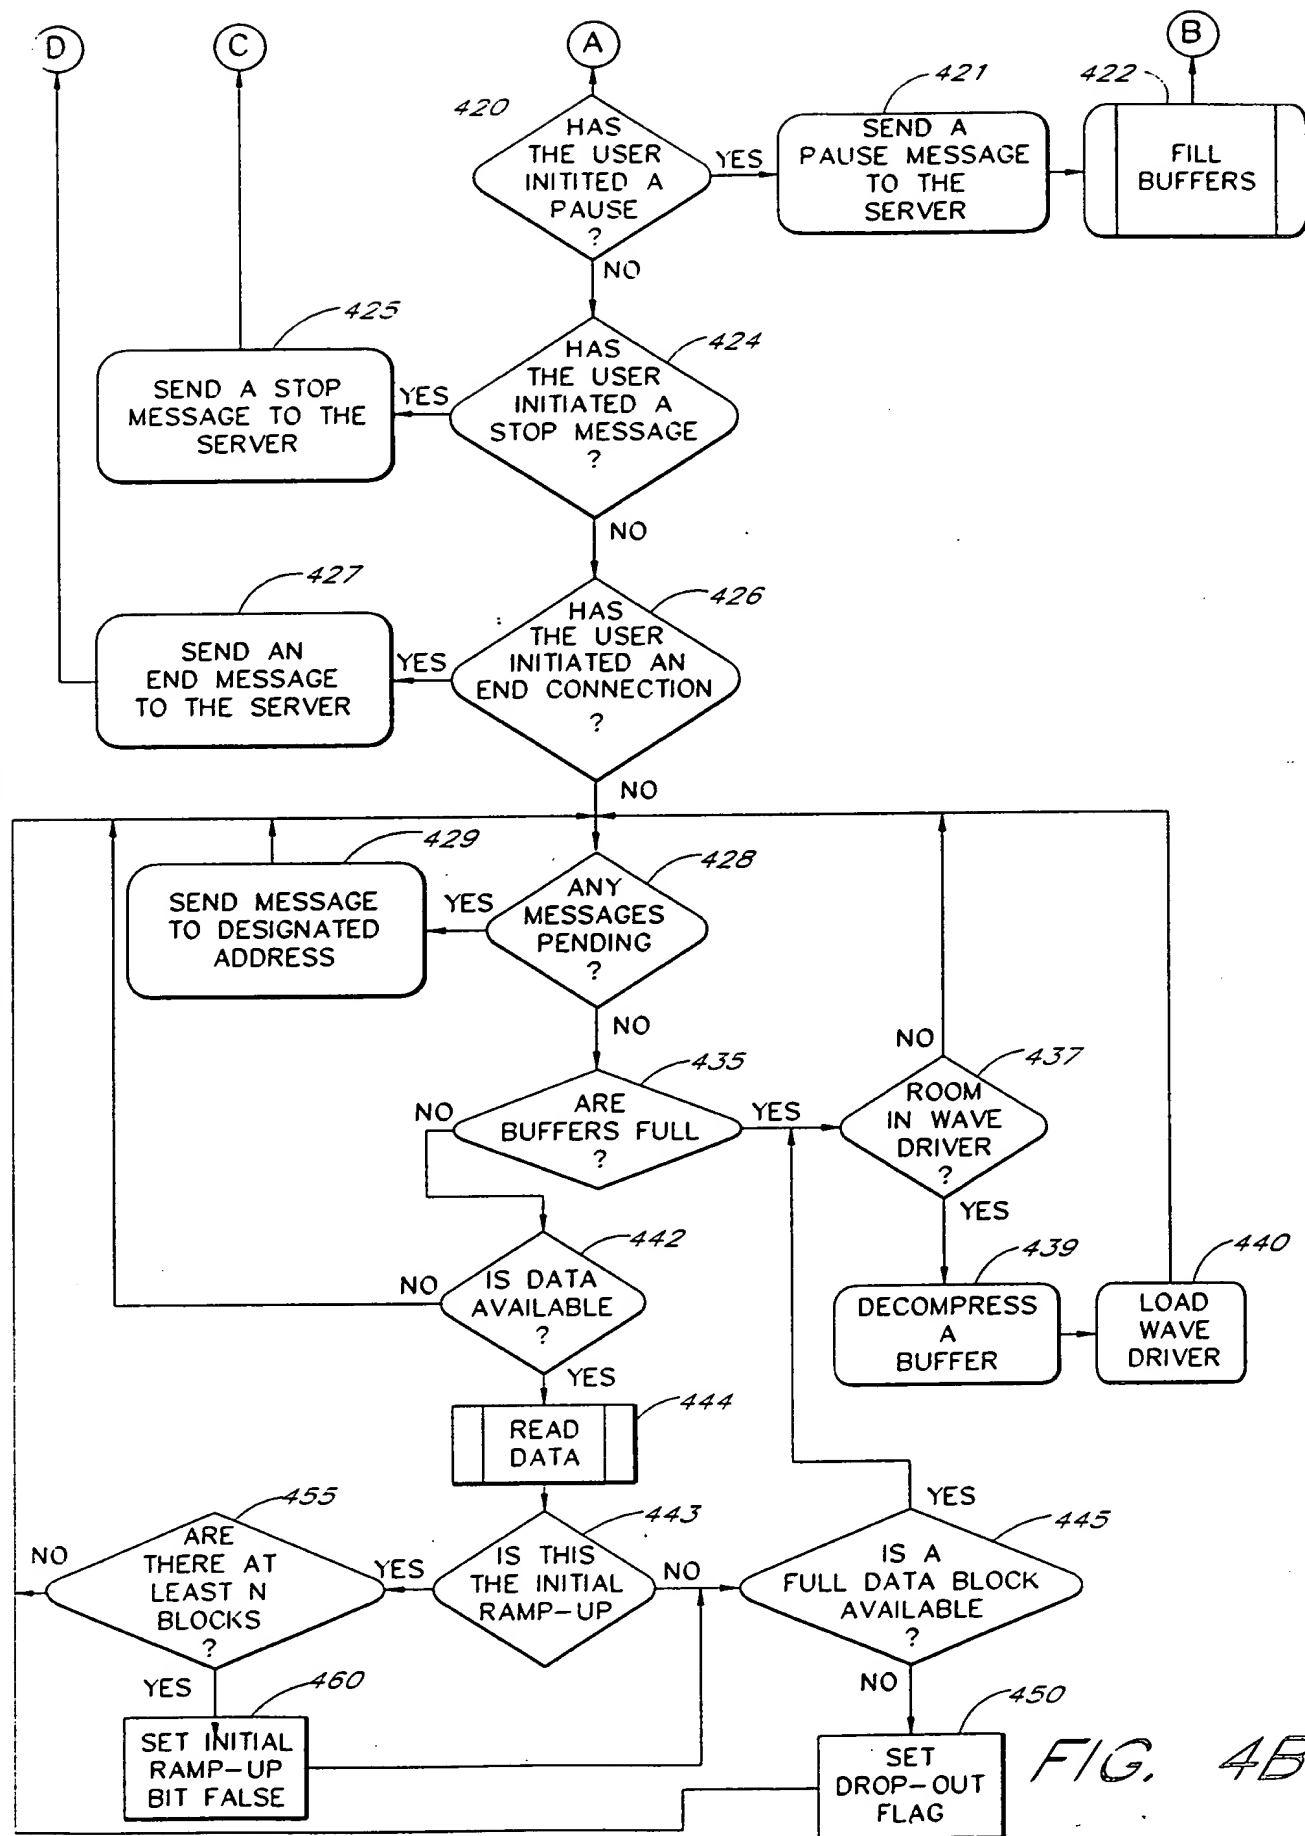


FIG. 4B

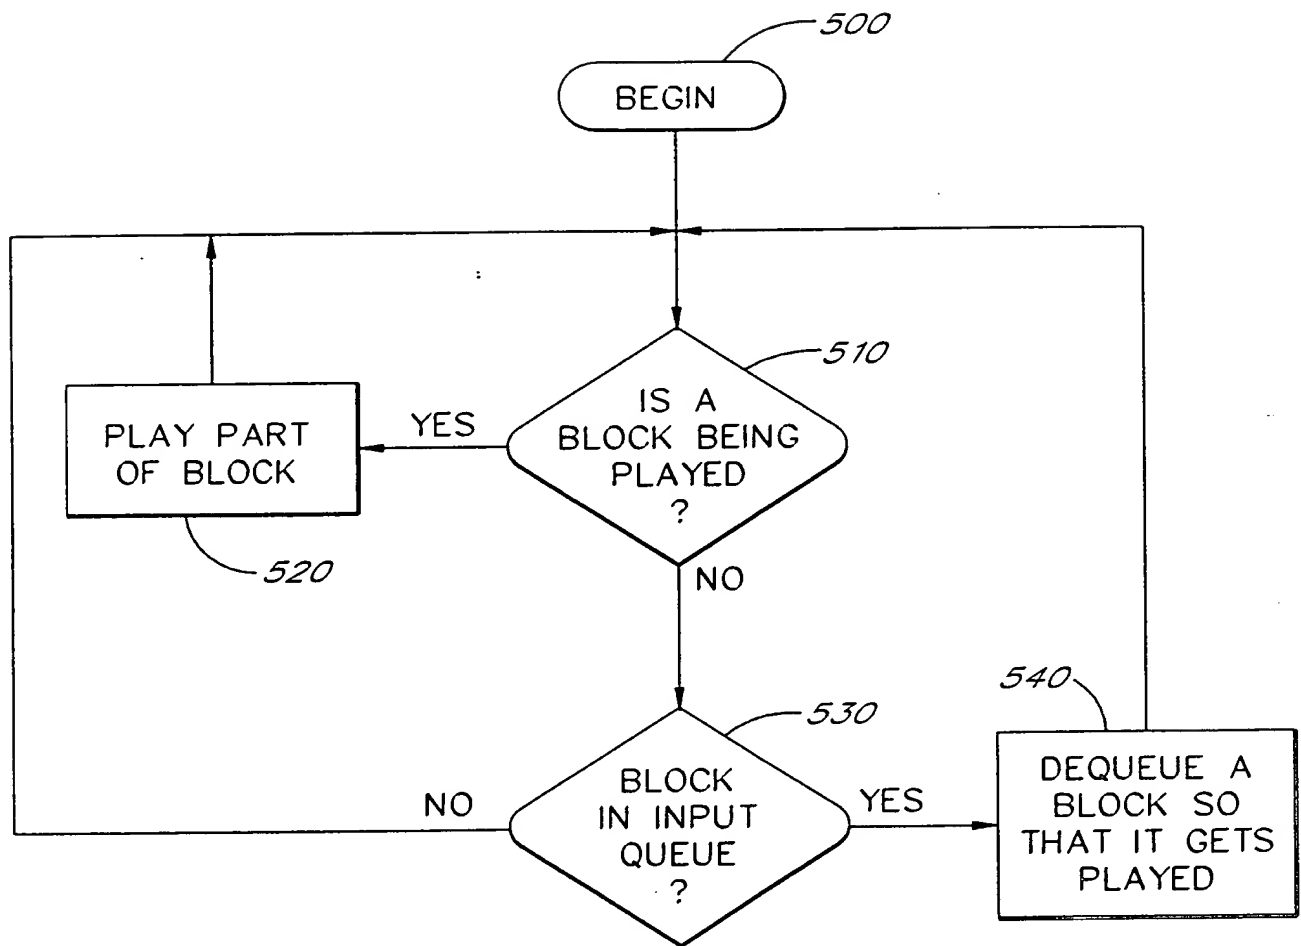


FIG. 5

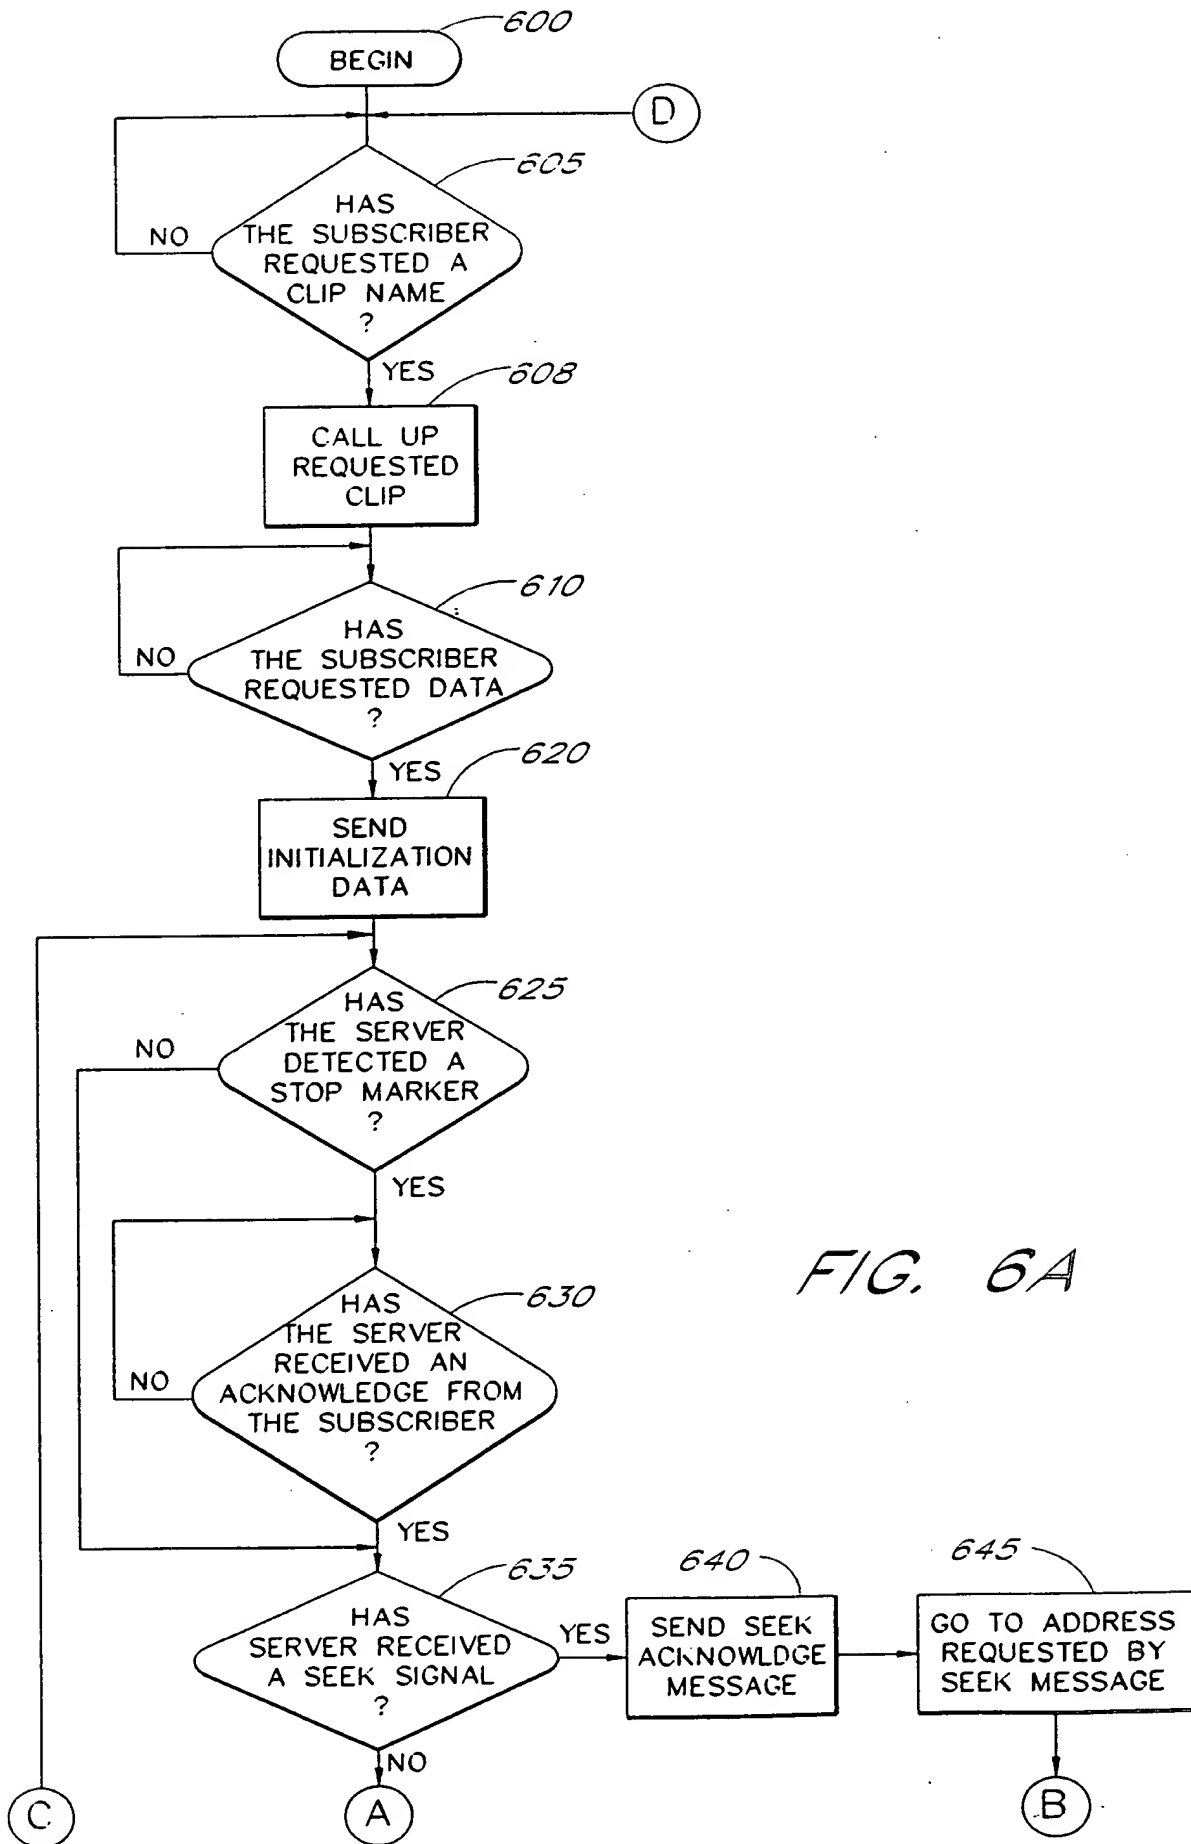


FIG. 6A

1. The first step is to identify the problem or question that needs to be addressed. This involves understanding the context and the specific requirements of the task.

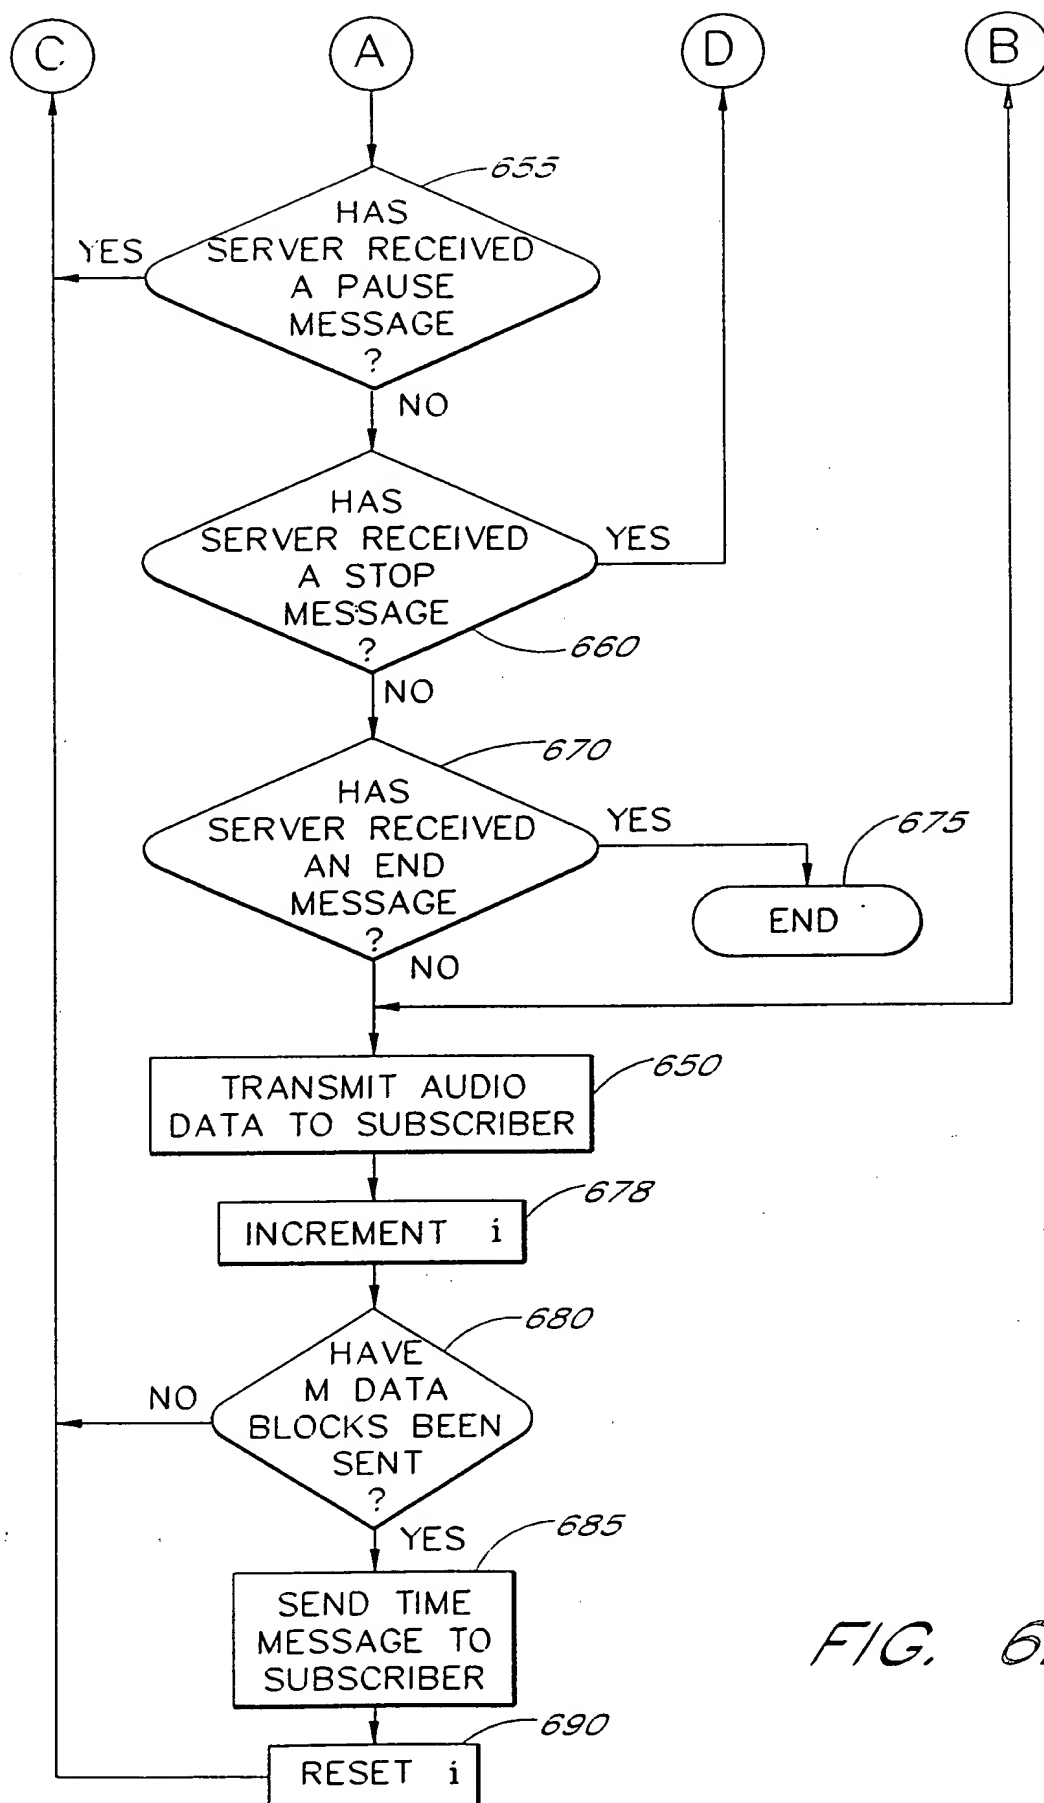


FIG. 6B

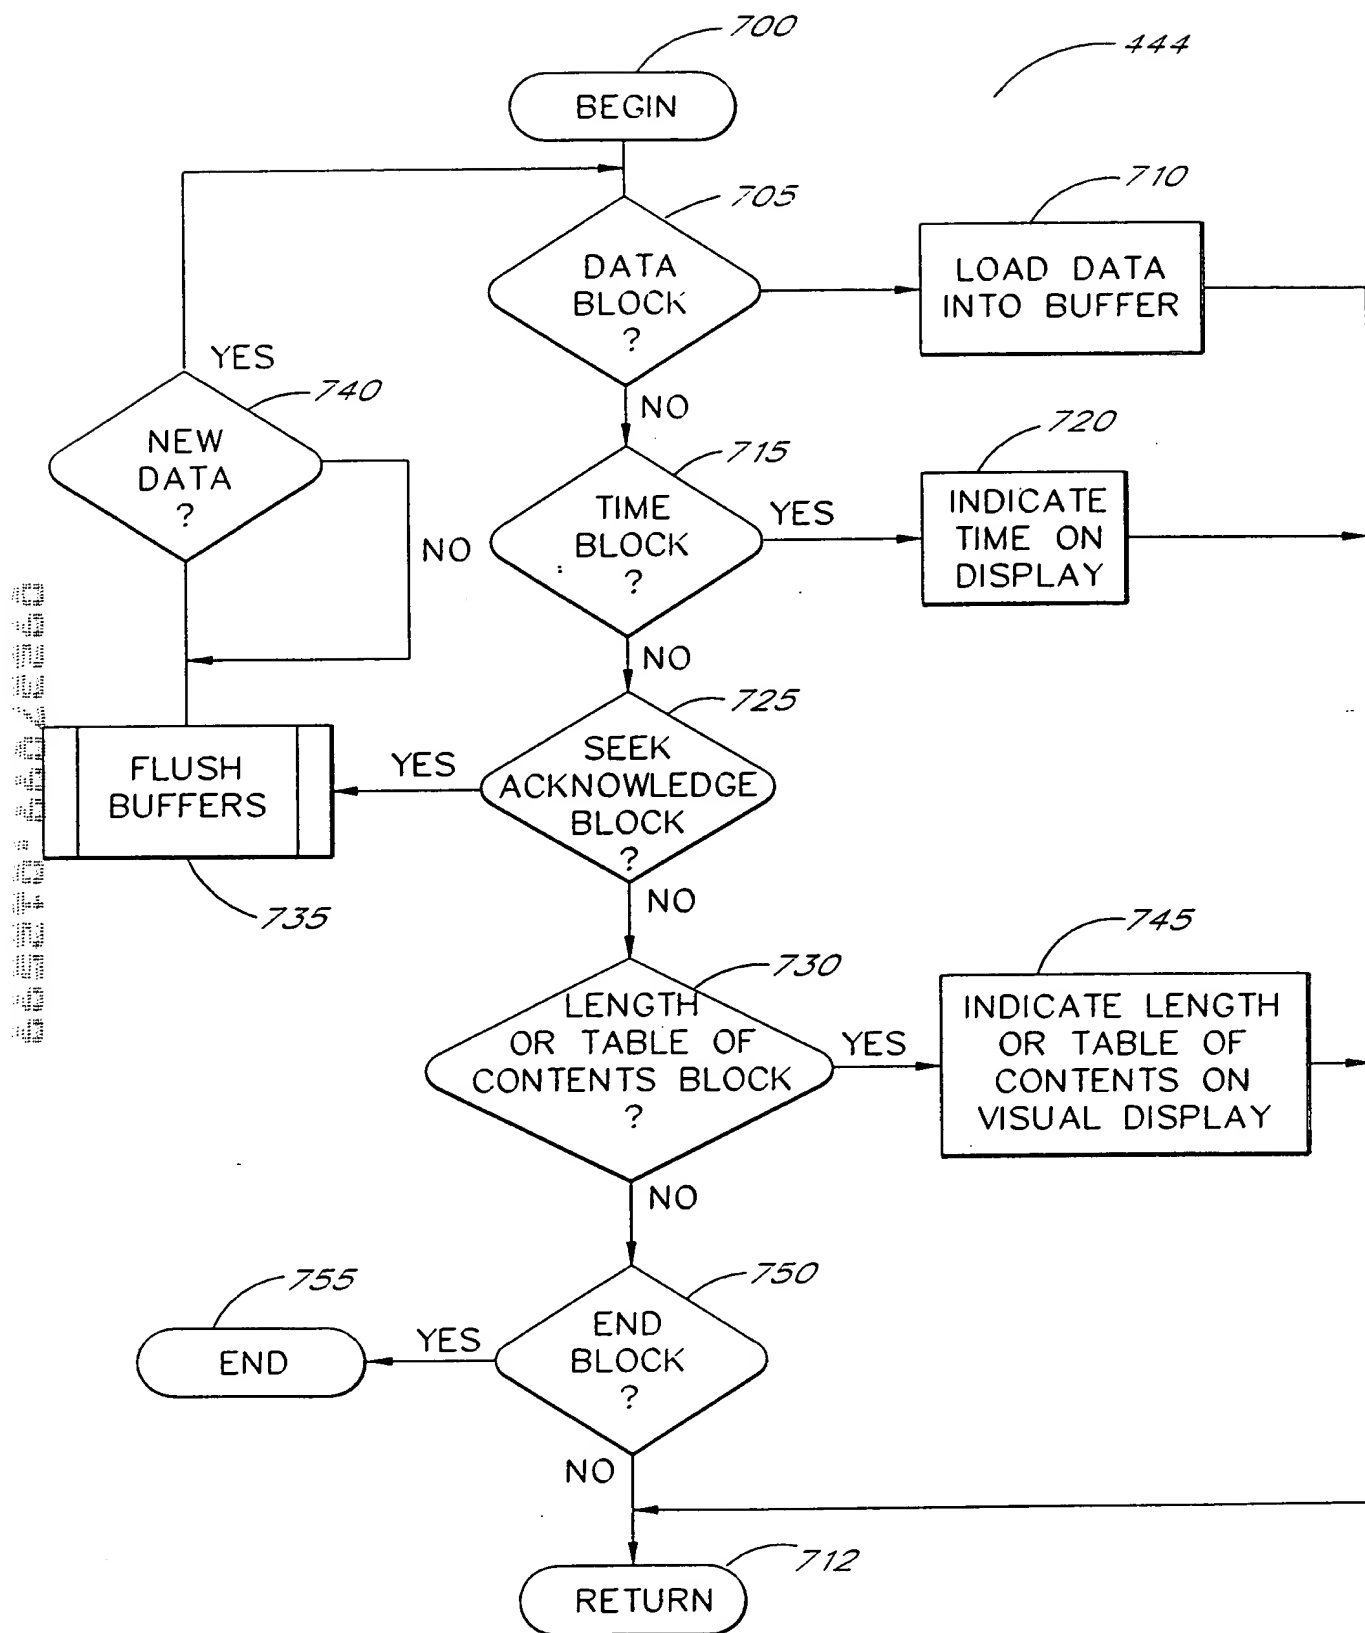


FIG. 7

663270 6622360

800

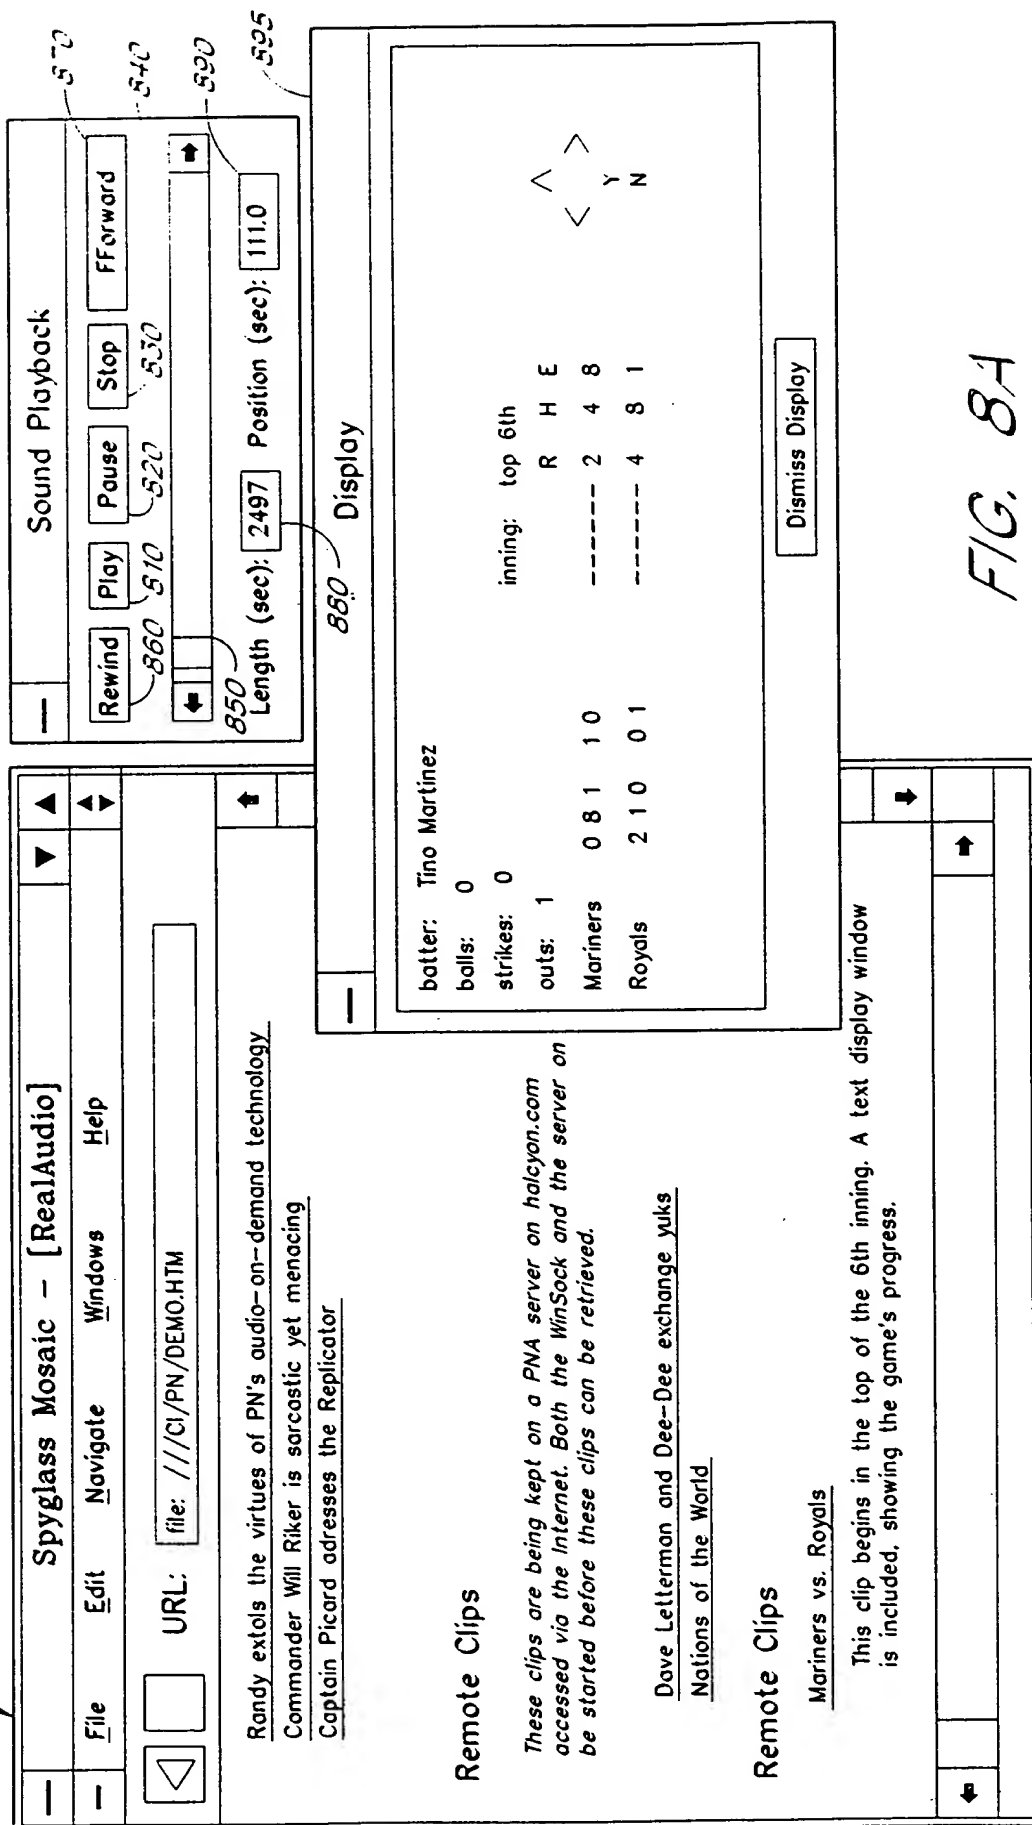


FIG. 8A

Custom - C:\NETMANAG\TCPIP.CFG

File

Interface

Setup

Services

Disconnect

Help

Interface:

PPPO - COM1, 57600 baud

Dial:

3826245

IP Address:

198.137.231.20

Subnet Mask:

255.255.255.0

Host Name:

boutell

Domain Name:

NAME	TYPE	IP	DOMAIN
PPPO	PPP	198.137.231.20	

Custom - C:\NETMANAG\TCPIP.CFG

Stop

Save

Print

Copy

Clear

Close

login: boutell

boutell

Password: *****

←

→

FIG. 8B

66370 662350

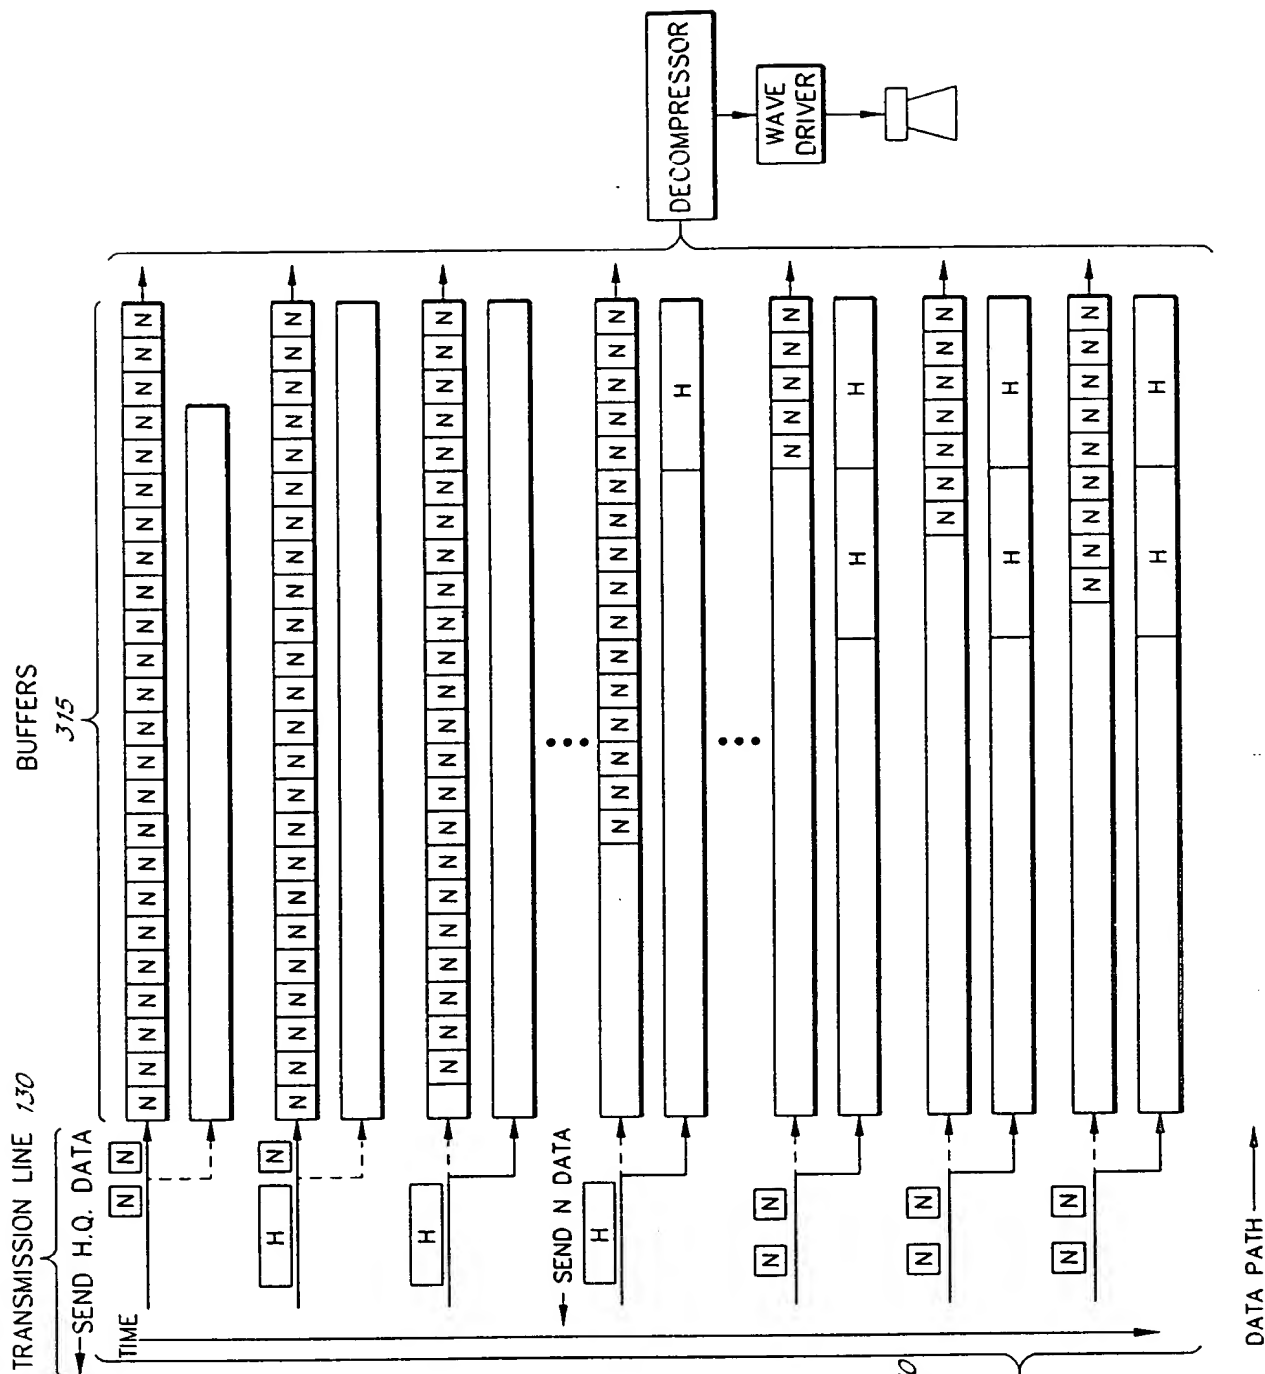


FIG. 9

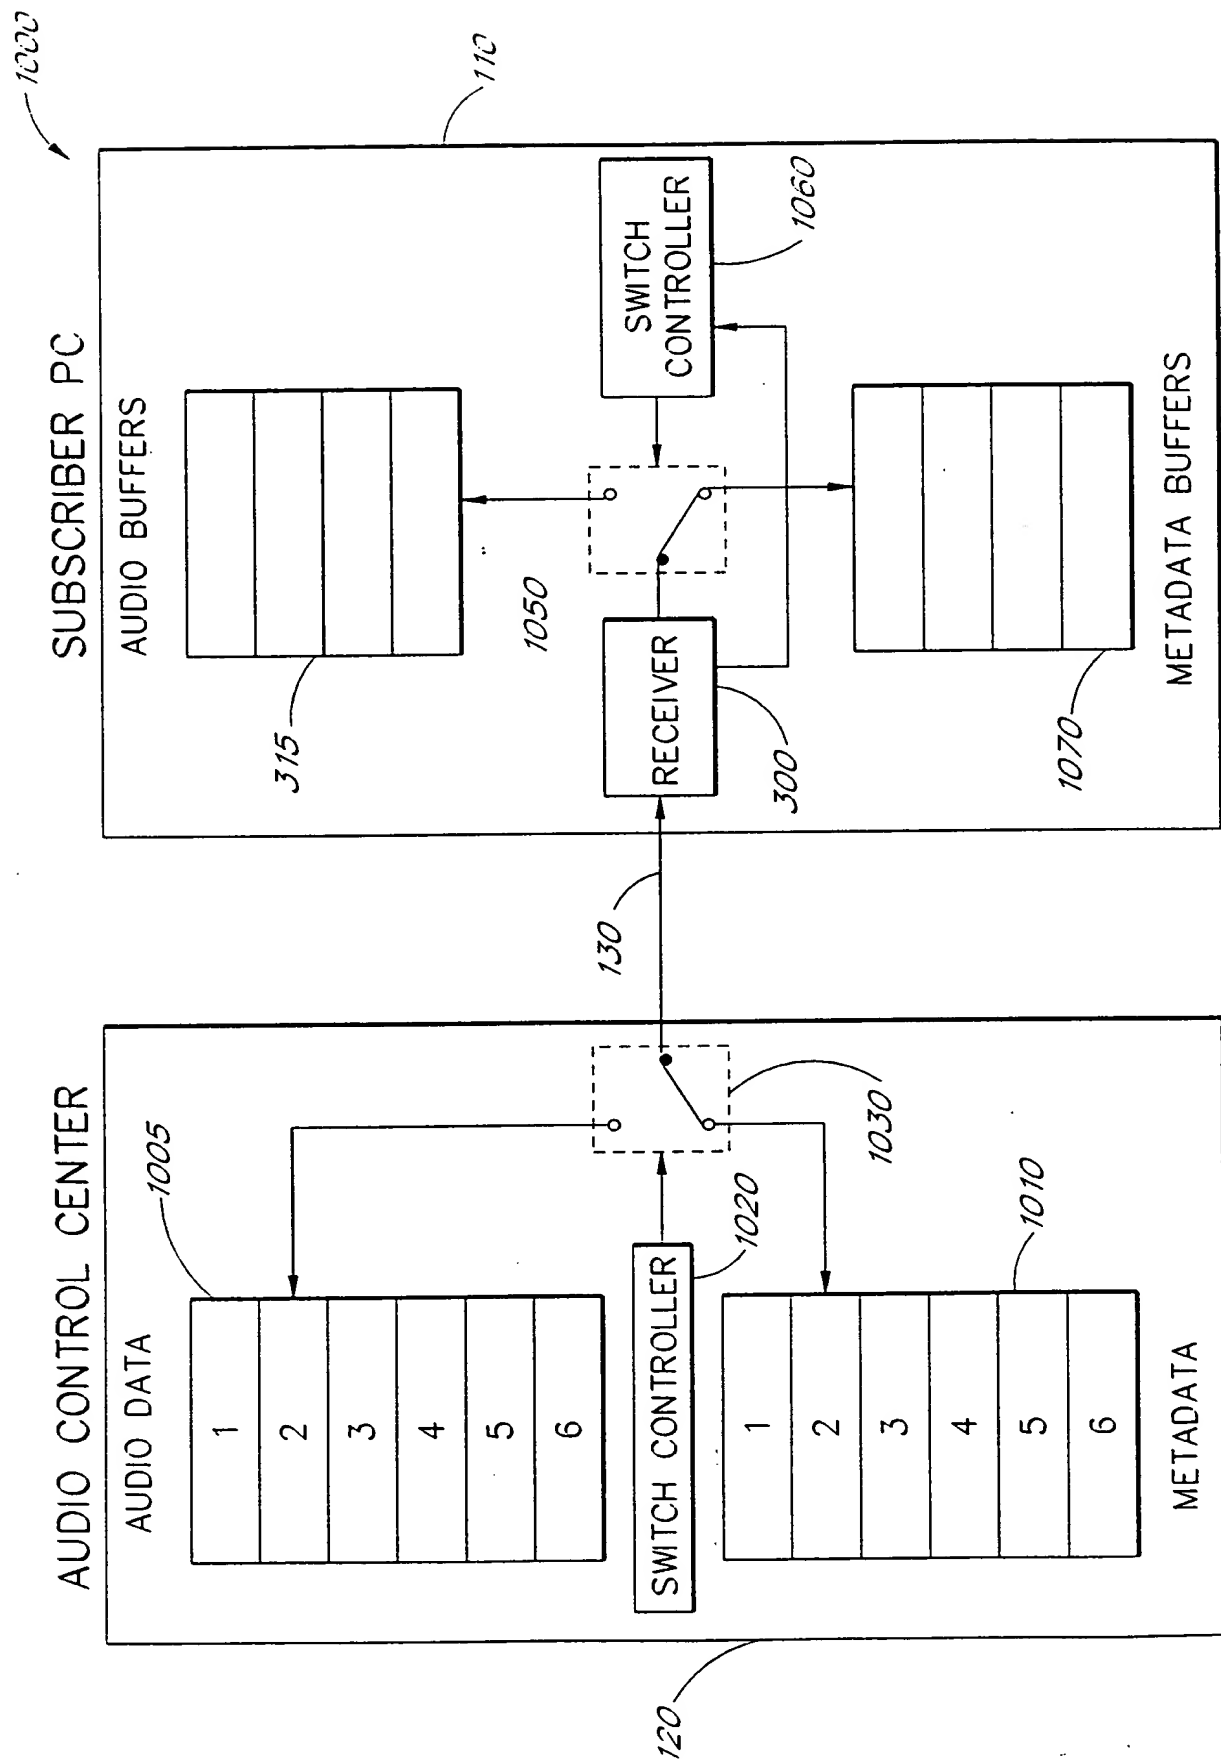


FIG. 10

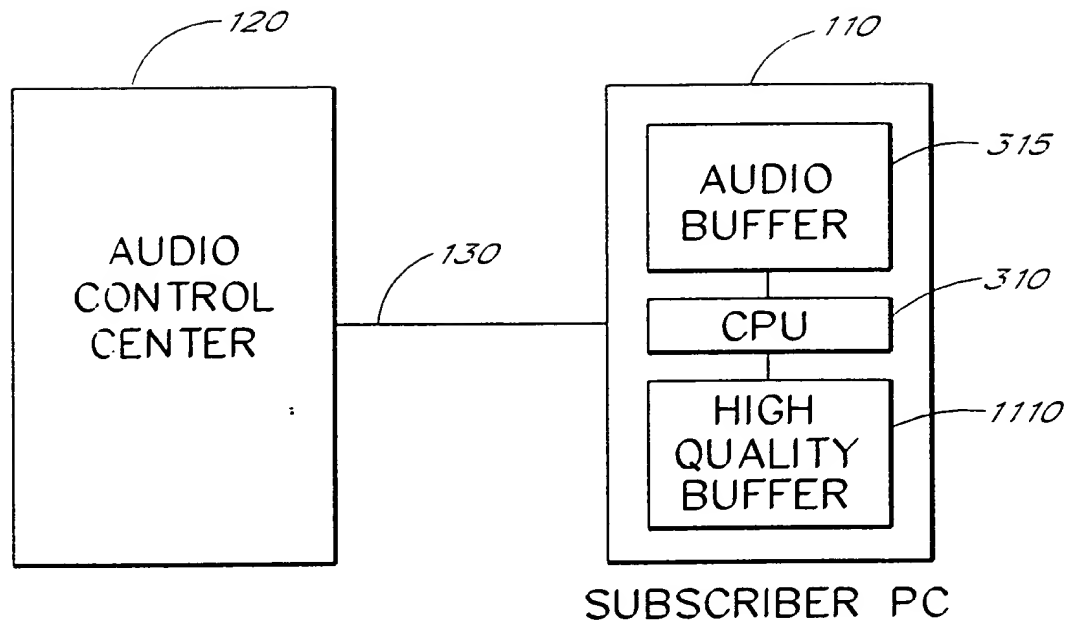


FIG. 11

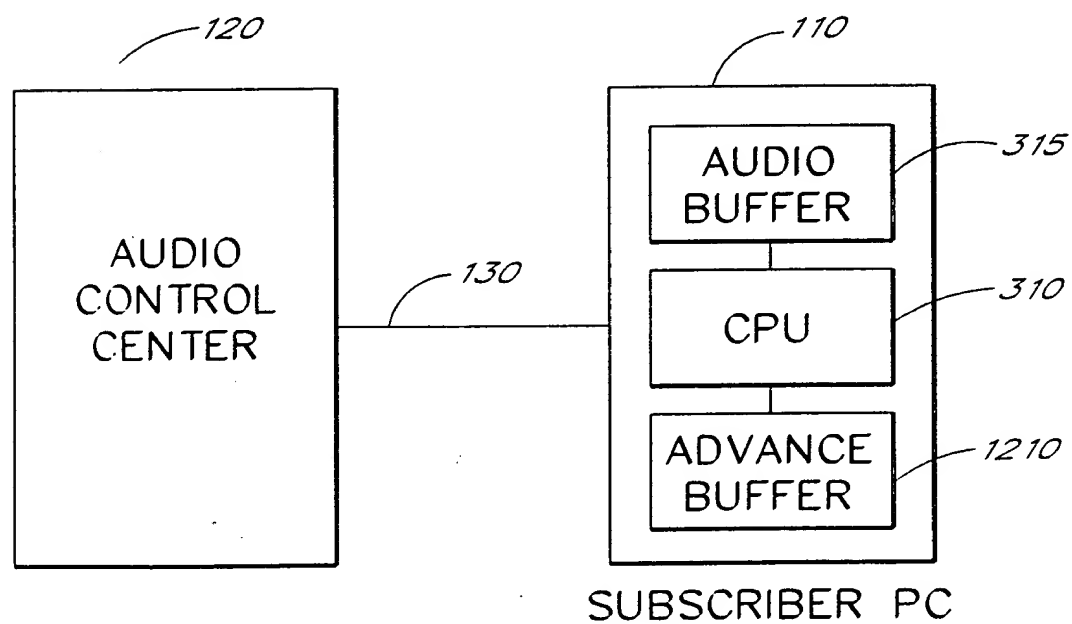


FIG. 12



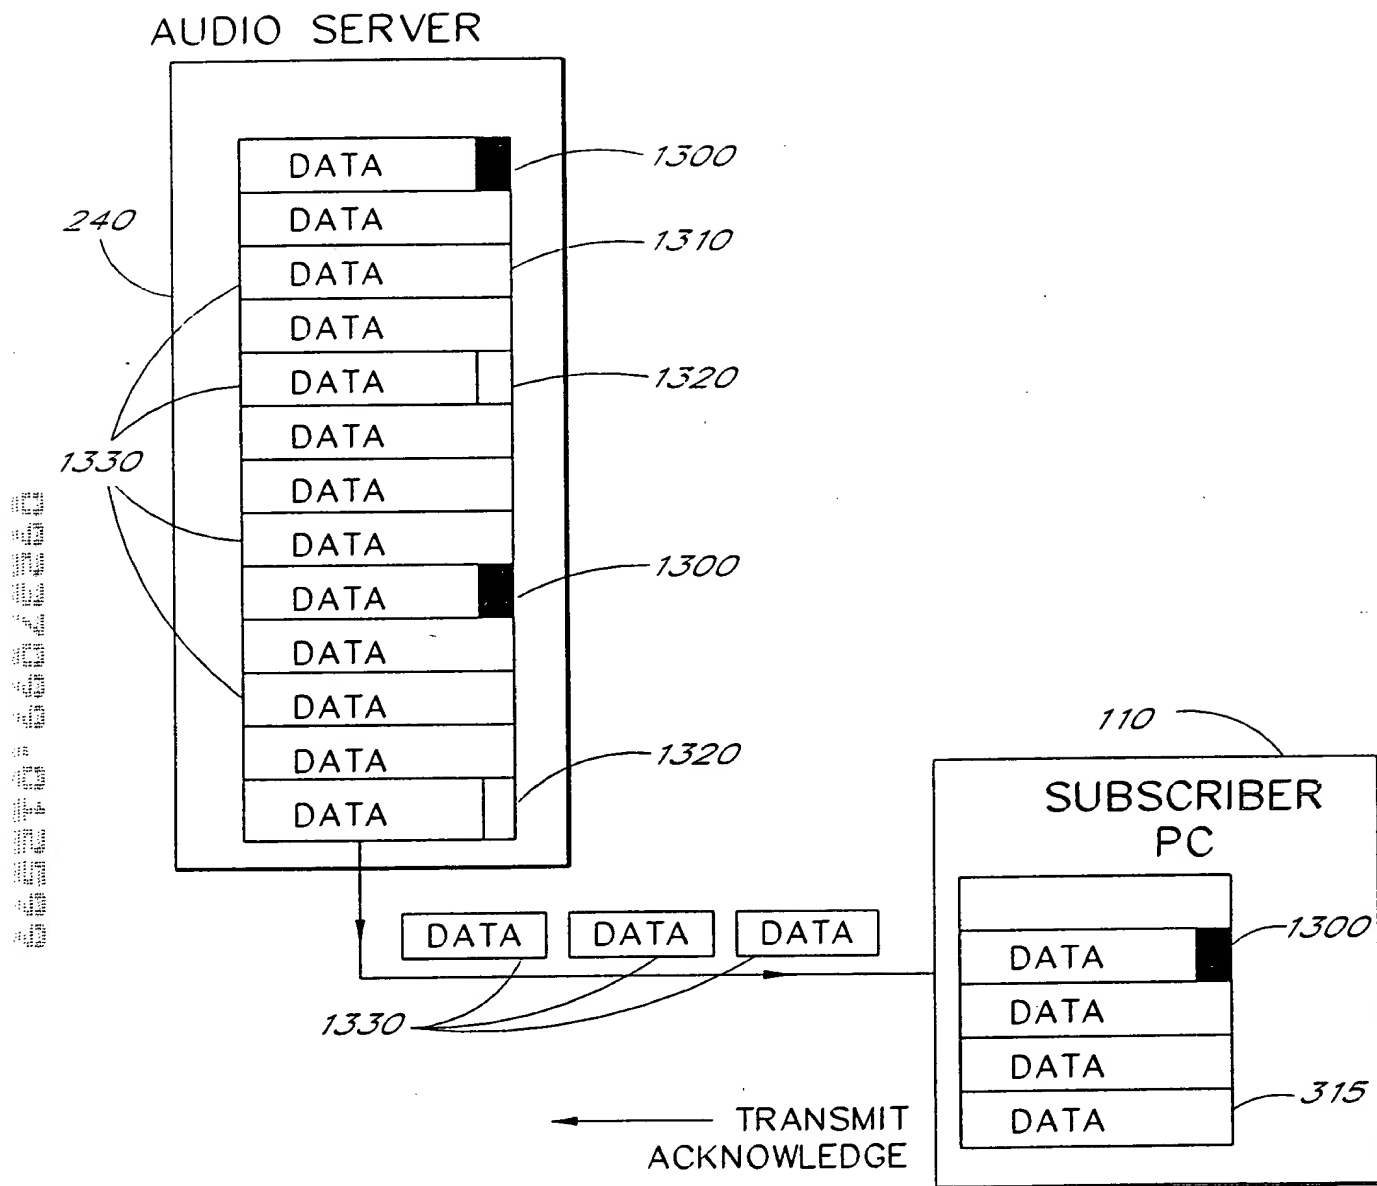


FIG. 13

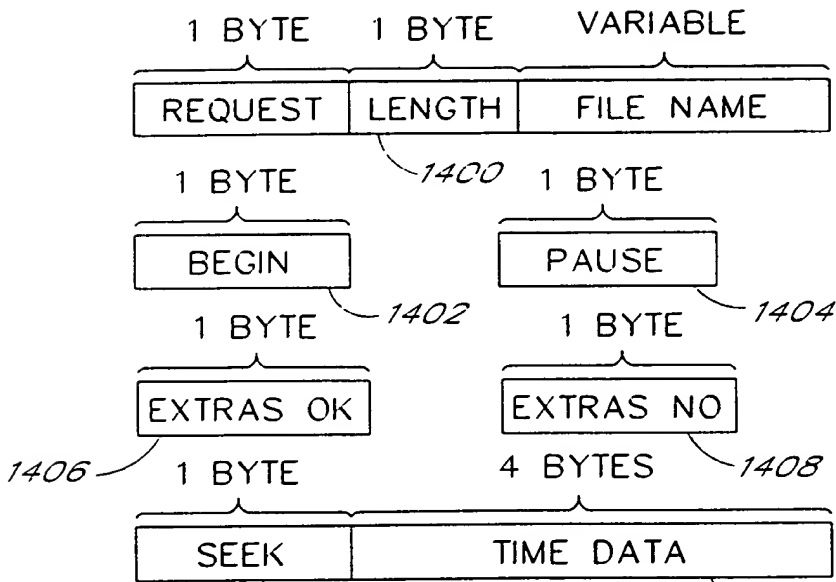

FROM CLIENT
TO SERVER

FIG. 14

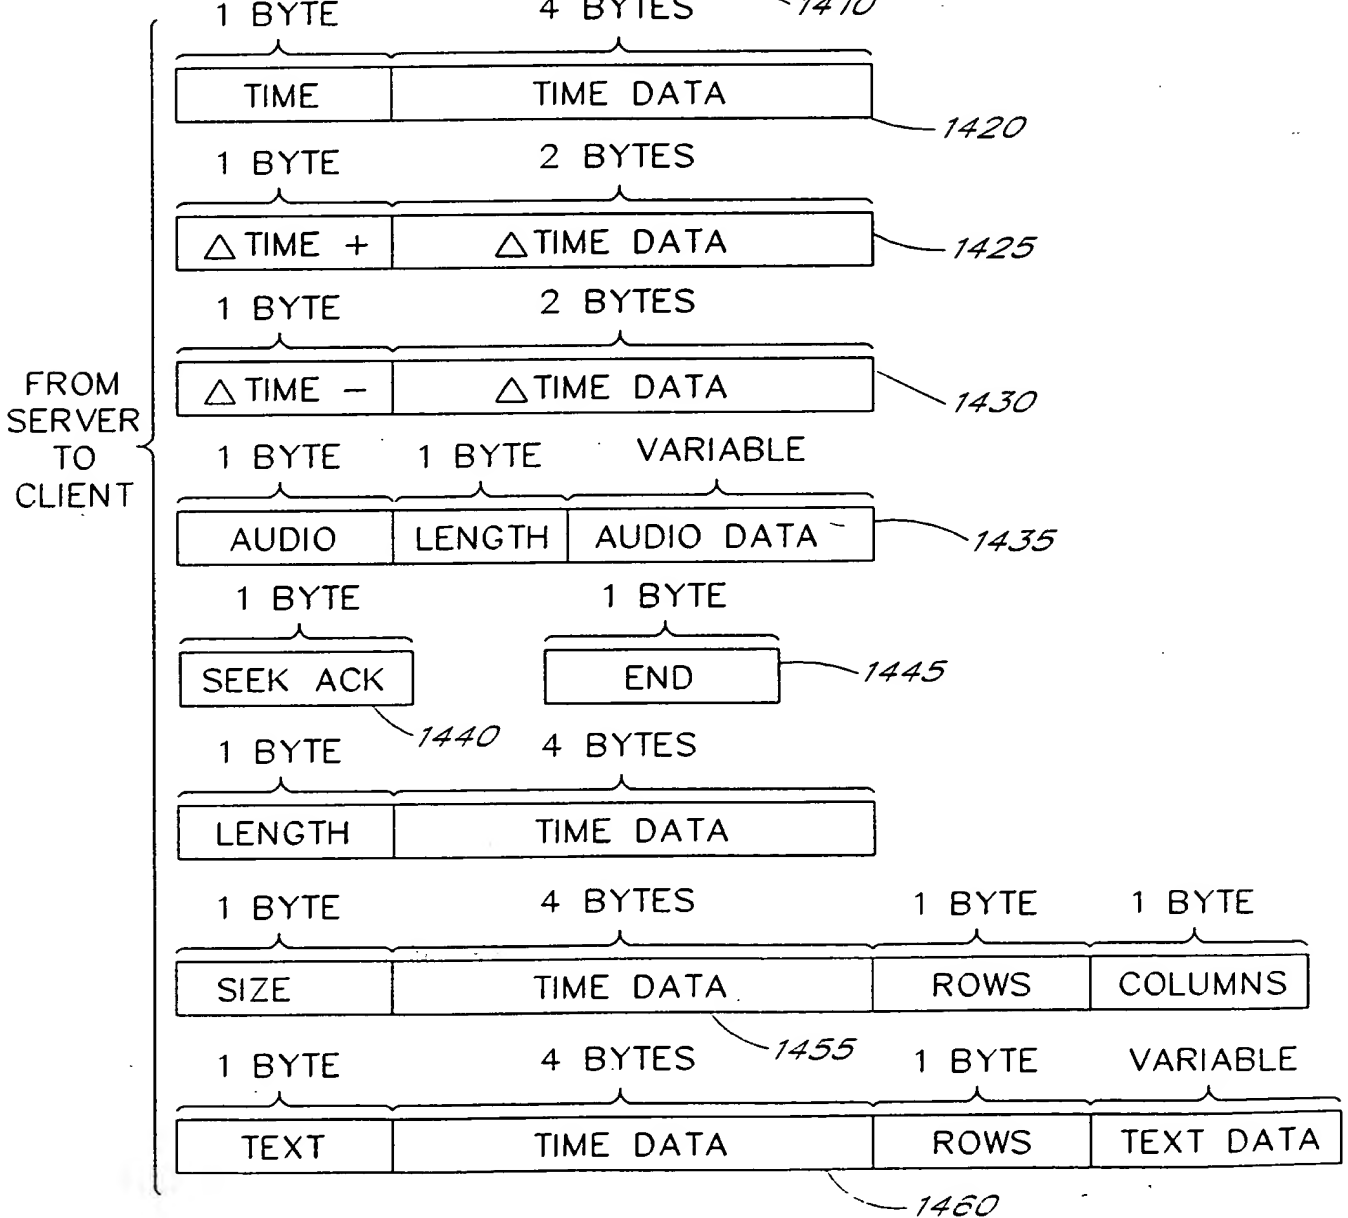

FROM SERVER
TO CLIENT